OVEN PARTS

For Models: KEBS207DBL6, KEBS207DWH6, KEBS207DAL6, KEBS207DBT6
(BLACK) (WHITE) (ALMOND) (BISCUIT)

KitchenAid®

30" BUILT-IN ELECTRIC
DOUBLE OVEN
THERMAL CONVECTION-UPPER
SELF-CLEAN

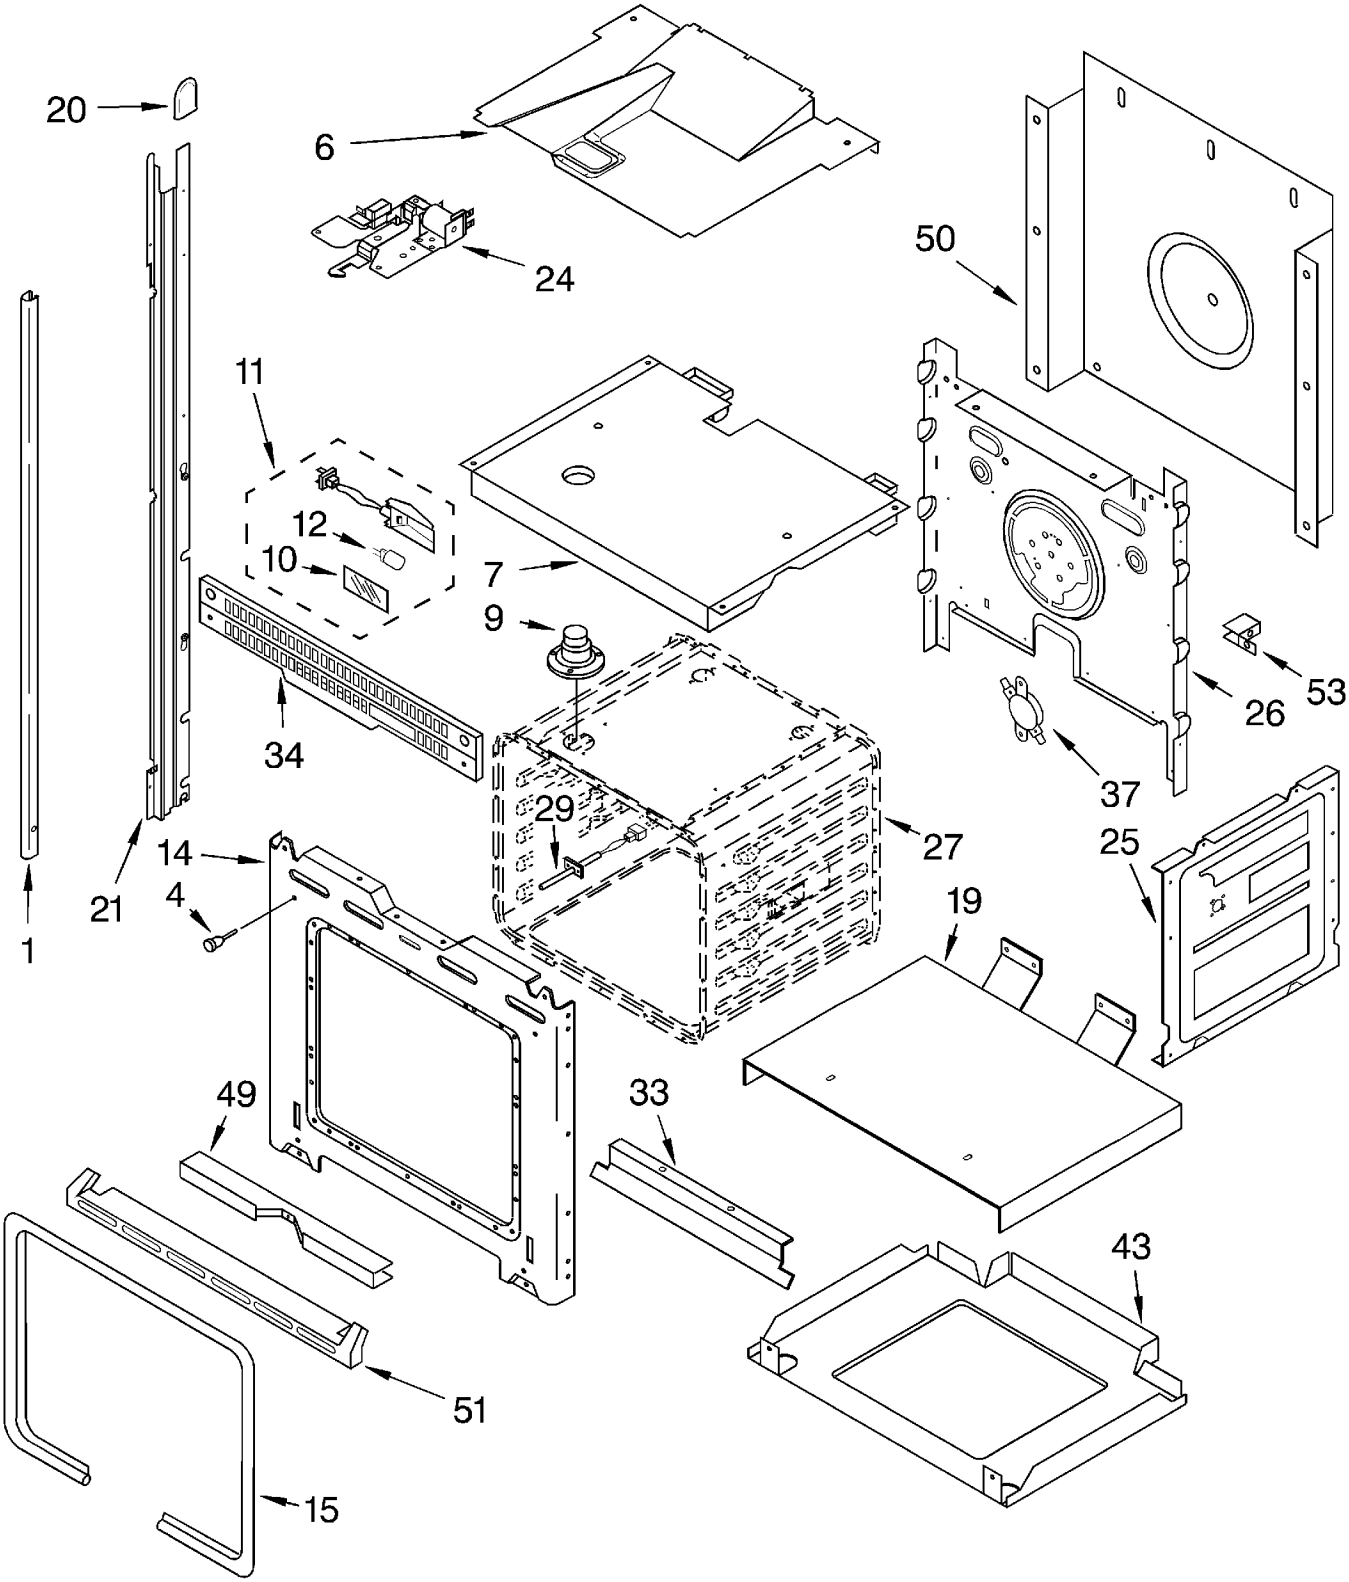

1		Trim, Side
	4450850	RH Black
	4450851	RH White
	4450852	RH Almond
	4452122	RH Biscuit
	4450853	LH Black
	4450854	LH White
	4450855	LH Almond
	4452123	LH Biscuit
		Screw
	4449747	Black Model
	4449041	White, Almond & Biscuit
4	4448520	Bumper, Door
6	4452201	Divider, Vent
	4449809	Screw
7	4452237	Top Chassis
	4449809	Screw
9	4452158	Tube, Vent
	4449154	Screw
10	4452163	Lens, Light
11	4448972	Oven Light Assy
	4449748	Screw
12	4452164	Bulb, Light
14	4451740	Frame, Front
	4449040	Screw
	4450118	Nut
15	4449372	Gasket, Door
19	4451478	Support, Insulation
	4449809	Screw
20	4451605	Cap, Spacer
21		Rail, Side
	4450581	Right Side
	4450582	Left Side
	4448444	Grommet
	4449154	Screw
24	4451424	Latch Assy
	4451663	Solenoid
	4451422	Microswitch N.C.
	4451426	Microswitch
	4449154	Screw
25	4454691	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452234	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)
29	4451665	Sensor
	4449154	Screw
33	4451619	Deflector, Vent
34	4452267	Vent, Center
	4159465	Screw
37	4452223	Thermostat (TOD)
	4449809	Screw
43	4451398	Base, Chassis
	4449809	Screw
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back

	4449809	Screw
51		Trim, Bottom
	4448477	Black Model
	4448478	White Model
	4448862	Almond Model
	4452415	Biscuit Model
	4159465	Screw
53	4449845	Support, Bracket
	4449809	Screw

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449316	Insulation, Wrap
4450365	Insulation, Back

CONTROL PANEL PARTS

For Models: KEBS207DBL6, KEBS207DWH6, KEBS207DAL6, KEBS207DBT6
(BLACK) (WHITE) (ALMOND) (BISCUIT)

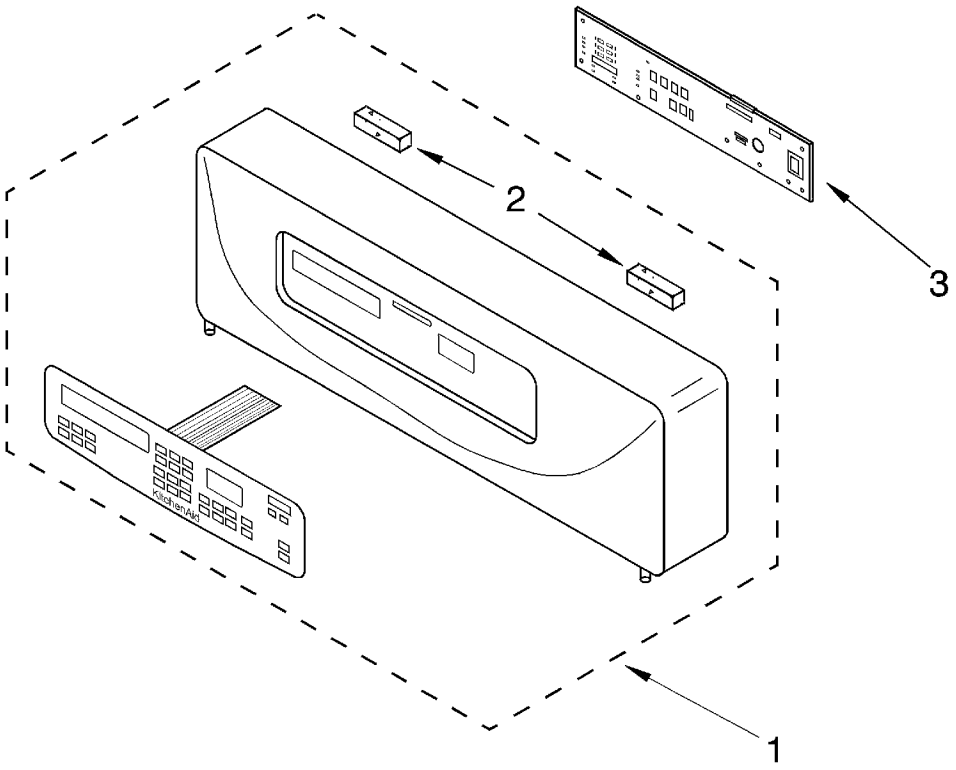

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Control Panel Assy. W/Membrane Switch
	4451294	Black Model
	4451295	White Model
	4451296	Almond Model
	4451298	Biscuit Model
	4159465	Screw
2	4451034	Gasket, Control Panel
3	4448871	Microcomputer
	4449745	Screw

LITERATURE PARTS

LIT4450411	Installation Instructions
LIT4450571	Use & Care Guide (Oven)
LIT4449066	Cookbook (T/C Oven)
LIT4452026	Tech Sheet (Oven)
LIT4449264	Easy Set Guide
LIT3191638	Safer Cooking Tips

OVEN DOOR PARTS

For Models: KEBS207DBL6, KEBS207DWH6, KEBS207DAL6, KEBS207DBT6
(BLACK) (WHITE) (ALMOND) (BISCUIT)

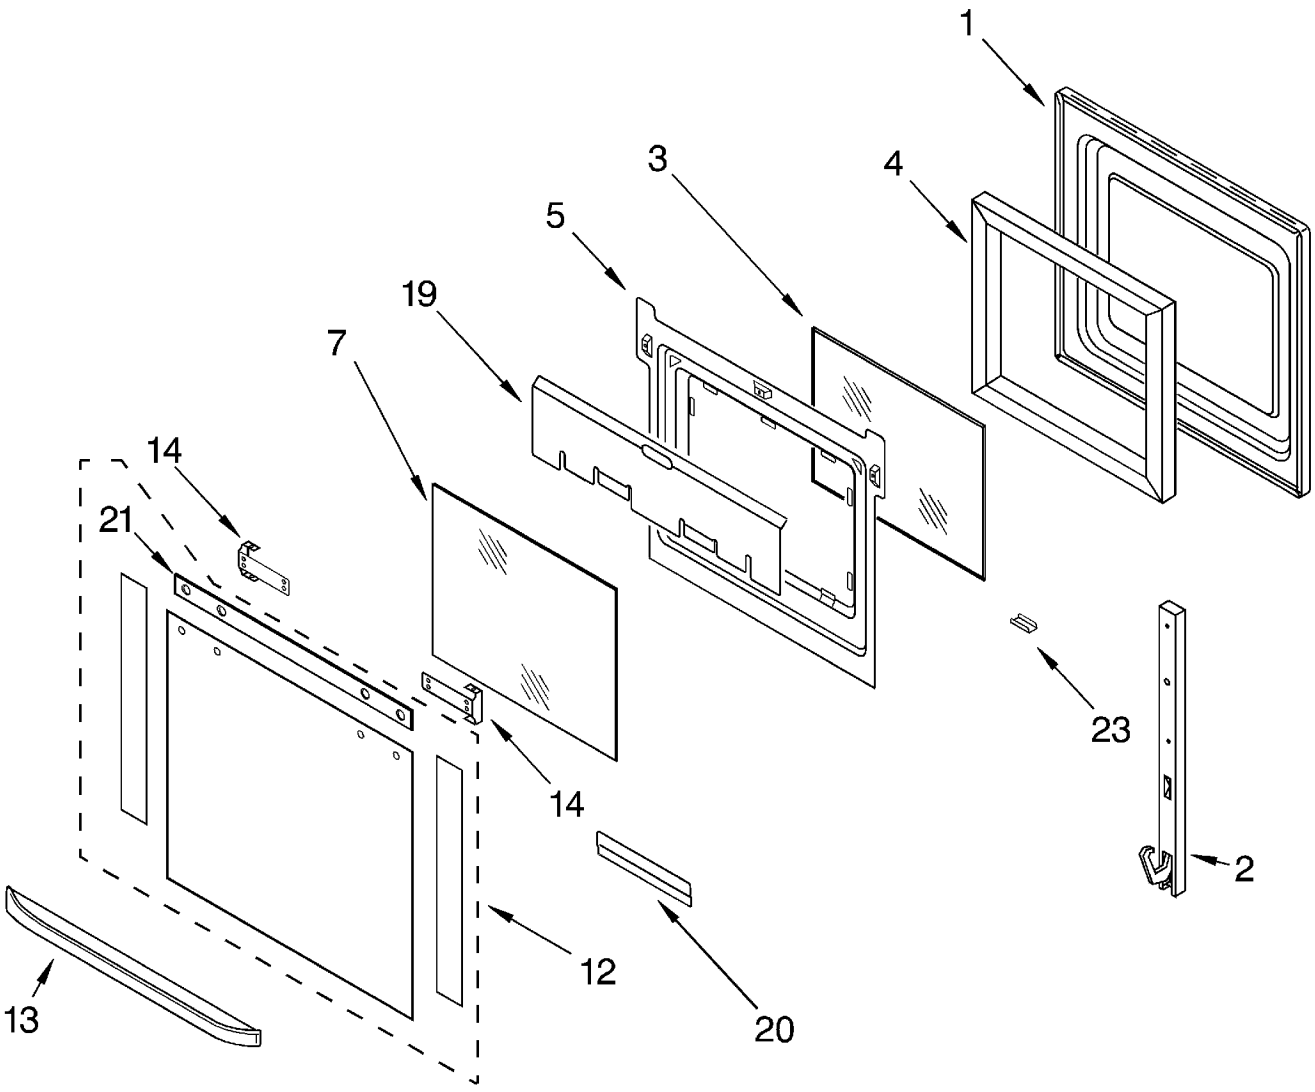

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451719	Door Liner
2	4454947	Hinge, Door
	4449743	Screw
3	4449259	Glass, Inner
4	4451722	Insulation, Door
5	4451671	Retainer, Glass
	4449809	Screw
7	4449263	Glass, Inner
12		Door Glass, Assy
	4452074	Black Model
	4452075	White Model
	4452076	Almond Model
	4452147	Biscuit Model
13		Door Handle
	4448414	Black Model
	4448415	White Model
	4448416	Almond Model
	4452129	Biscuit Model
14	4450813	Bracket, Handle
	4451040	Screw
19	4450362	Shield, Heat
	4449809	Screw
20	4451668	Retainer, Glass
	4449809	Screw
21	4451674	Seal, Door Top
23		Retainer, Clip
	4450863	Black Model
	4450864	White Model
	4450865	Almond Model
	4452119	Biscuit Model

INTERNAL OVEN PARTS

For Models: KEBS207DBL6, KEBS207DWH6, KEBS207DAL6, KEBS207DBT6
(BLACK) (WHITE) (ALMOND) (BISCUIT)

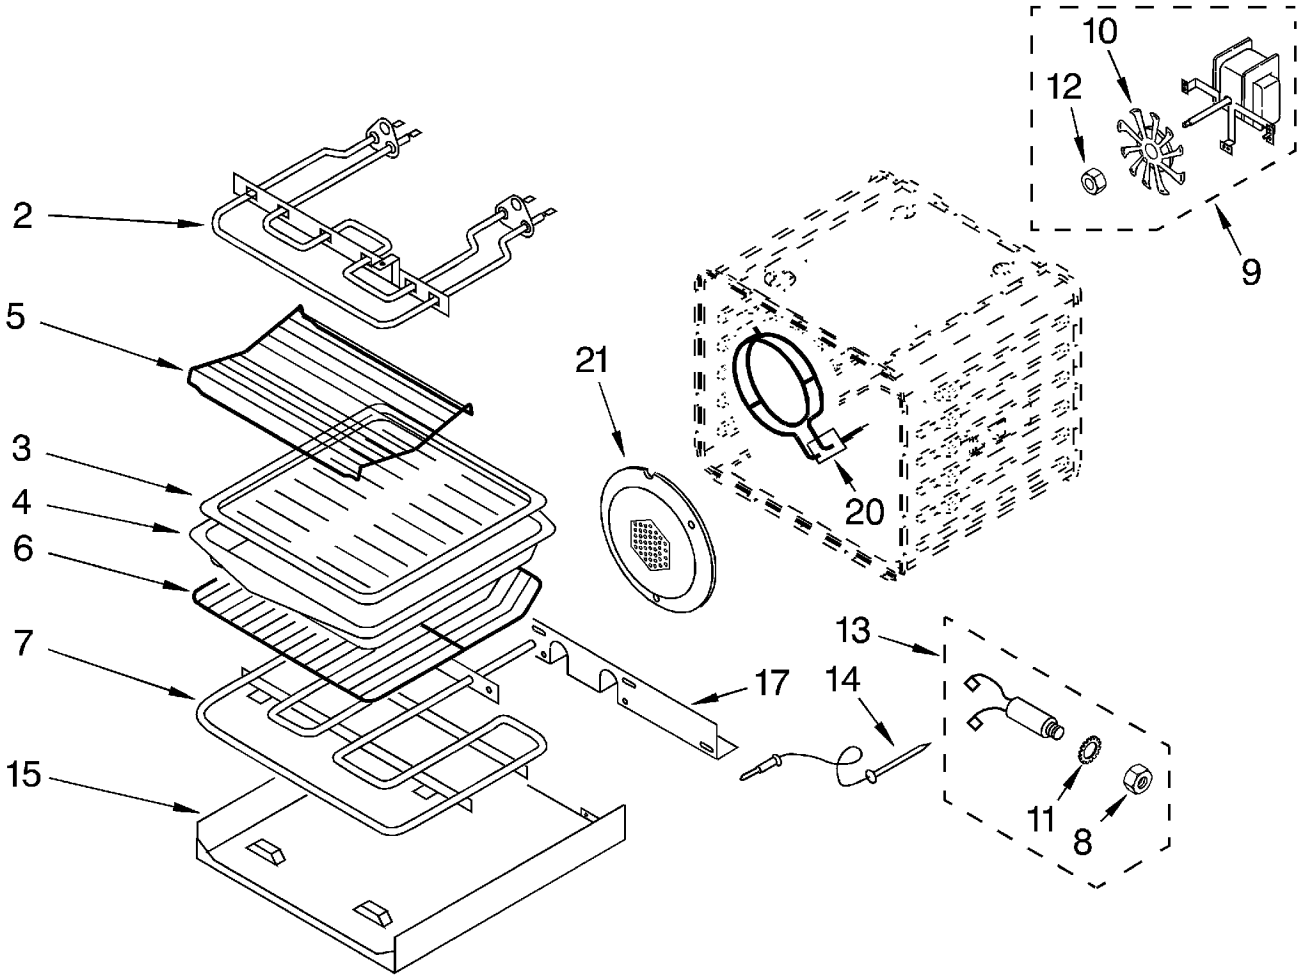

2	4452156	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
5	3181534	Rack, Roasting
6	4448717	Rack, Oven
7	4452155	Element, Bake
8	4448881	Nut, Hex
9	4451583	Convection Motor
	4449154	Screw
10	4452226	Blade, Fan
11	4448882	Washer, Lock
12	4452227	Nut
13	4451355	Jack, Meat Probe
14	4448948	Probe, Meat
15	4448723	Tray, Bake
17	4450039	Cover, Bake Tray
	4449809	Screw
20	4452157	Element, Convection
	4449154	Screw
21	4448418	Cover, Fan
	4449154	Screw

TOP VENTING PARTS

For Models: KEBS207DBL6, KEBS207DWH6, KEBS207DAL6, KEBS207DBT6
(BLACK) (WHITE) (ALMOND) (BISCUIT)

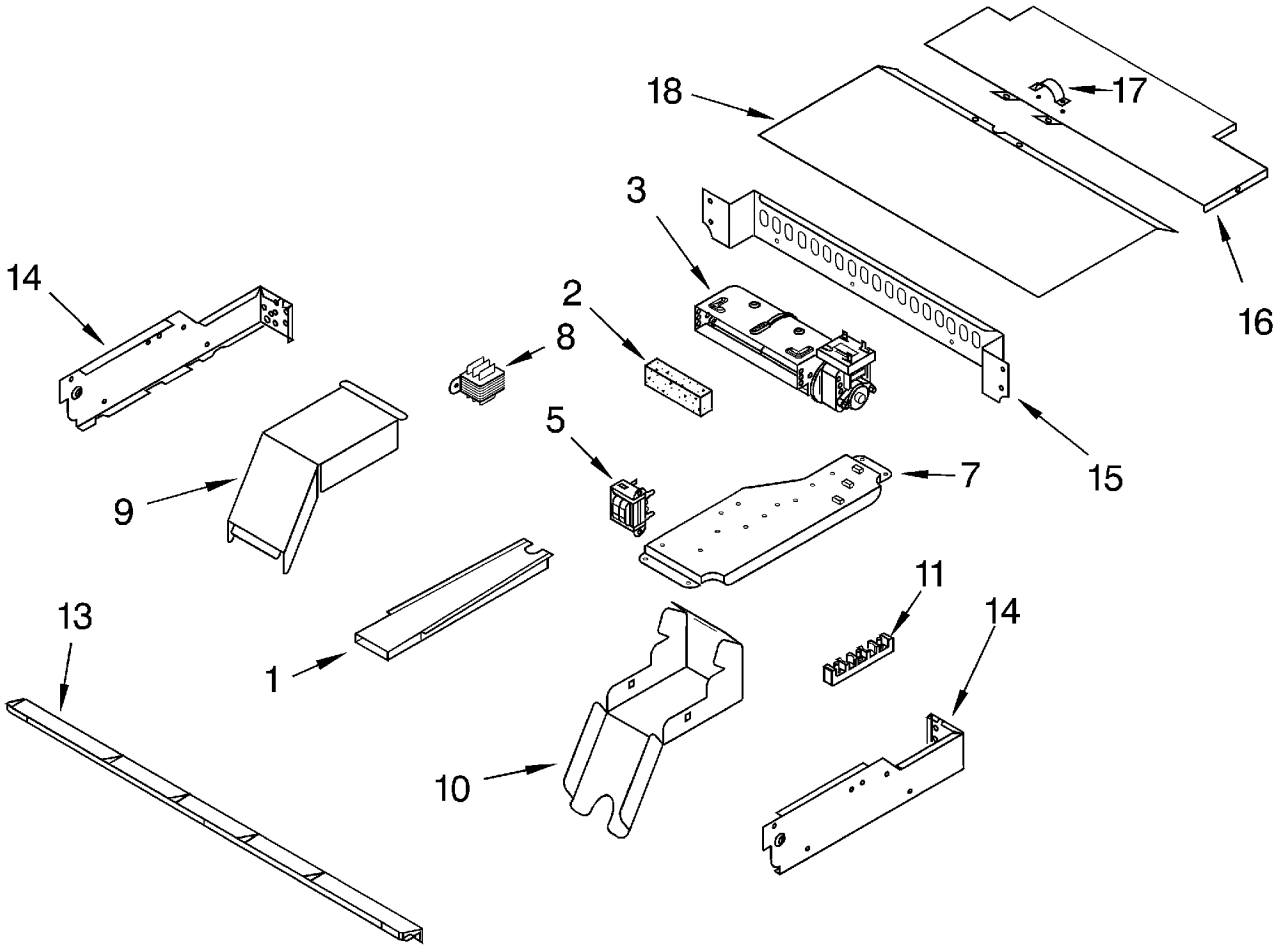

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
2	4451758	Foam, Block
3	6610168	Blower (Upper & Lower)
	4449809	Screw
5	6610122	Transformer, (Lights)
	4449809	Screw
7	4451789	Plate, Mounting
8	4451658	Transformer, Control
	4449809	Screw
9	4451438	Elbow, Vent-Top
10	4451752	Elbow, Vent-Bottom
11	4449868	Block, Terminal
	3196181	Screw
13	4448552	Vent, (Control Panel)
	4450038	Screw
14		Side, Control Top
	4451597	Right
	4451598	Left
	4449809	Screw
	4449154	Screw
15	4452244	Back, Control
	4449809	Screw
16	4450551	Cover, Top Rear
	4449809	Screw
17	4448664	Clamp
	4449809	Screw
	112432	Nut
18	4450554	Cover, Top Front
	4449809	Screw

OPTIONAL PARTS

PAINT, TOUCH-UP (1/2oz.)

72017	White
261869	Cord Brown
72032	Black
4392899	Biscuit

PAINT, SPRAY

350930	White
261900	Citrine White
830864	Black
4392901	Biscuit

ADHESIVE

591014	Adhesive Loctite (1/3 oz.)
482338	Sealer, Silastic (3 oz.)

SPLICING WIRES--25FT. LENGTH

242828	Wire (12 Ga. 150 c Black)
242820	Wire (14 Ga. 150 c Black)
242821	Wire (14 Ga. 150 c Blue)
242822	Wire (14 Ga. 150 c Brown)
242830	Wire (14 Ga. 200 c Brown)

242823	Wire (14 Ga. 150 c Green)
242824	Wire (14 Ga. 150 c Orange)
242829	Wire (12 Ga. 150 c Red)
242825	Wire (14 Ga. 150 c Red)
242831	Wire (14 Ga. 200 c Red)
242826	Wire (14 Ga. 150 c White)
242827	Wire (14 Ga. 150 c Yellow)
242832	Wire (14 Ga. 200 c Yellow)

WIRING HARNESS PARTS

4452239	Harness, Wire (Latch)
4454927	Harness, Wire (Main)
4450953	Conduit, Double
4448664	Clamp
4449809	Screw
112432	Nut
4450800	Screw, Ground
4450815	Fuse Assy (Service Only)
4452222	Spacer, Harness
4454835	Tie, Cable
4451761	Support, Wiring
4454842	Tie, Cable
313438	Harness, Clip
4454835	Tie, Cable

Miscellaneous

814381	Hinge Pin Kit
4448950	Screw, Install (4)